


564 HO Cheat Sheet

The 564HO GS has several new features and characteristics that require special attention during installation and set-up. Refer to the owner's manual for full details.

• This Fireplace Requires a Burner Kit, Firebacks, Logs/Media, and Face/Grill

This fireplace is shipped without a burner. This allows the fireplace to be configured in one of three unique designs. See the table below to verify you have all of the items required.

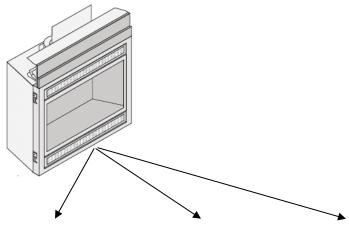

Burner Style	EmberFyre™ Burner	DiamondFyre™ Burner	DancingFyre™ Burner
	96900116	96900115	96900114
<u>Firebacks</u>	Requires 564 <u>Ceramic</u> Firebacks. (use 96100179 Brick/Herringbone or other ceramic firebacks)	Requires one of the following: - Stainless 96100249 - Enamel Black 96100250	Included w Burner (Black Painted)
Logs/Media	Included w Burner	– Painted Black 96100251Use 564 HO (31 DVI) Media	Included w Burner
		Driftwood (94500548)Other Media To Follow	
Face/Grill	Use any 564 Face or Grill	Use any 564 Face or Grill	Use any 564 Face or Grill

- <u>Intake Restrictor Shipped with Burner</u> See the burner installation instructions for installing the intake restrictor
- <u>Vent Configuration Settings Differ Between Burners</u> Because the unique burners affect airflow, the EmberFyre™ and DancingFyre™/DiamondFyre™ have different vent configuration settings (and intake restrictors). Follow the instructions in the manual to insure the correct setting.

NOTE: Travis Industries recommends using a 6-5/8" diameter vent when terminating vertically.

- Bend the Pipe Shield Vertical After the Fireplace is in the Framing The pipe shield protects the header from heat. After the fireplace is in place, and before you install the vent, bend the pipe shield to a vertical position.
- <u>Unique Thimble Required for Wall Penetrations</u> This fireplace uses a specialized wall thimble to allow the vent to pass through a wall. One thimble is included, but if a second wall penetration is made, make sure to order an additional one (sku 250-02318).
- <u>Verify the Upper Accent Light is in Place and Works Correctly</u> The accent light located on the firebox ceiling is secured with set screws and may become loose during shipping. Before leaving the installation, verify the upper accent light works correctly (see owner's manual for details on accessing the bulb).

Page 1 of 1 17601657 Printed 8/18/11